




# SoftMatt Antique

## Special Effect Paint



## STONE FINISH

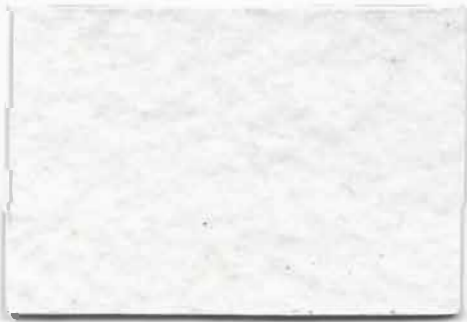

001



002



003



004



005



006



007



008



009



010



## STONE FINISH



011



012



013



014



015



016




017



018



019

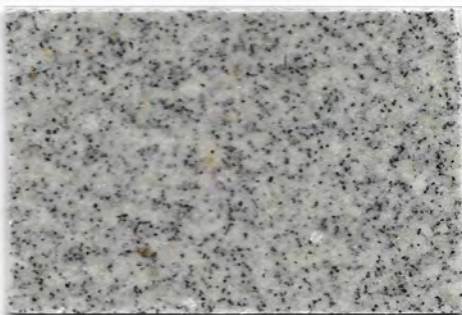

020

## SOFTMATT ANTIQUE



7264



5219



7234



5211



5151



5221



5100



5205




5553



5416



## SOFTMATT ANTIQUE

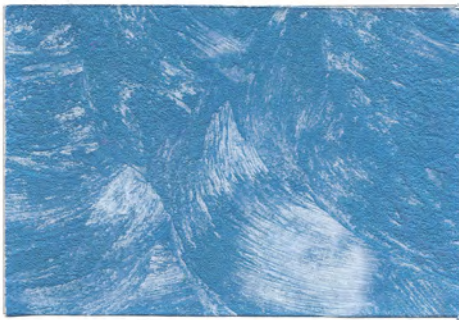


5425




5304



5408

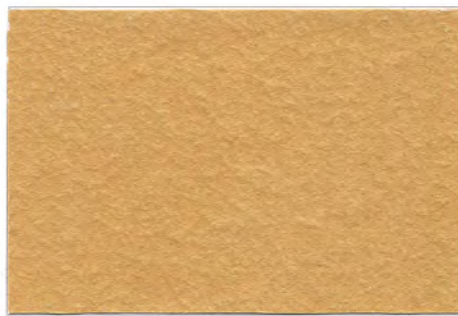

5301

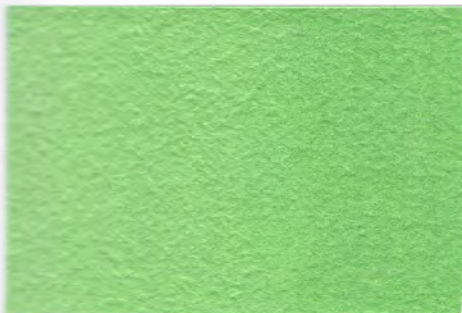

5435



5502



5231



5500



5451



5402



- Base colour: Sunny  
Glazed over with: Almond Joy  
YD 11144  
VM 273



- Base colour: Tempest Sea  
Glazed over with: Cobalt Cabana  
AC 2107A  
VP 243

Create your

## SoftMatt Antique

masterpiece



### STEP 01

Apply 2 coats of  
Decorative Primer  
on the wall using  
a paint roller.



### STEP 02

Apply 2 coats of  
Odourless AirCan,  
pre-matched base  
colour using a paint  
roller if required.



### STEP 03

Scoop a palm-sized  
dollop of SoftMatt  
Antique Base coat  
using putty knife.  
Then, transfer it onto  
the paint tray.



### STEP 04

Apply the first coat of  
SoftMatt Antique base coat  
using a roller. After 2 to 4  
hours, apply the second coat  
to match your desired design.



### STEP 05

Finish off with 1 to 2  
coats of SoftMatt  
Antique Top Coat  
by rolling a paint  
roller.



# CREATIVITY WITHOUT BOUNDARIES

The walls of a home need not stay plain and boring. Put some mojo onto your walls with different creative designs and let them tell your stories and reflect your personality. Combine Softmatt Antique with any of your favourite colours of City Paints® Special Effect Paints for a masterpiece of unparalleled creativity.



3D Silver  
Glazed over with Introspect



3D Lemon  
Glazed over with Modern Mojito



3D Leather  
Glazed over with Burnese Teak

## Create your 3D PAINT masterpiece



### STEP 01

Apply 2 coats of Softmatt Antique Primer onto the wall using a paint roller.



### STEP 02

Apply the first coat of Base coat with a stainless steel trowel and wait 2 to 4 hours before applying the next coat. Repeat this step for the second and third coat.



### STEP 03

After 20 to 30 minutes create irregular veins (similar to the pattern of stone walls) using a damp-bristled spatula.



### STEP 04

Smoothen the surface with a stainless steel trowel.



### STEP 05

Create brick, block or wave designs with a flat-tip screwdriver.



### STEP 06

After 18 to 12 hours use a paint brush or sponge to finish your 3D paint with colours\* for unsurpassed creative combinations.

# MORE THAN JUST SPECIAL EFFECTS



with low VOC and contains no lead, mercury, chrome or heavy metals. It is recommended for interior walls.

- ✓ No Bubbling
- ✓ No Peeling
- ✓ Long Lasting
- ✓ Works Well with Uneven Walls

*Painting  
Service*

CONTACT US NOW

## SURFACE PREPARATION



### 01 REPAIR

Remove oil, loose, defective paint or powdery residue. Repair cracks and uneven surfaces with Multi-purpose Joint Compound.



### 02 CLEAN

Clean the area thoroughly and let it dry. Make sure it is free of dirt, grease and other foreign matter.



### 03 PAINT

Allow all surfaces to dry completely prior to painting.



### 04 PROTECT

Safeguard your masterpiece against dirt and water with 1 to 2 coats of Clear Coat.



## PAINT ON DIFFERENT SURFACES

### WOOD LAMINATE



Before

After

### METAL



Before

After

### TILES



Before

After

### WOOD



Before

After



**CITY PAINTS™**

New Industry Area, Street 3, Gate 174

Doha - Qatar

[www.city-paints.com](http://www.city-paints.com)

Tel: 44929952 Fax: 44160411